

USE AND CARE GUIDE 36" HIGHBOY TV STAND



Questions, problems, assembly help, missing parts?

We will gladly help and ship your replacement parts free of charge.

If you have any question related to product please free to contact our customer service mail:Rockpointservice@hotmail.com

All the detail Assembly issue pls review the website: www.HiRockpoint.com

IMPORTANT


THIS INSTRUCTION CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE




- Do not allow chlidren to climb on unit
- Serious or fatal crushing injuries can occur from furniture tip-over, To prevent this furniture from tipping over it must be permanently fixed to the wall.
- Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home. For advice on suitable fixing systems, contact your local specialized dealer
- This unit contains small parts which can be swallowed by children and pets.
 Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets.

BEFORE YOU START


- Separate and count all parts and hardware.
- Have the following tools: Flat head Screwdriver,#2 Philips Head Screwdriver.
- If using a power tools, please be ware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.
- Requires two people for assembly.

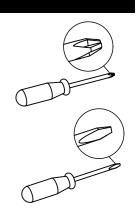

CAM LOCK FASTENING SYSTEM

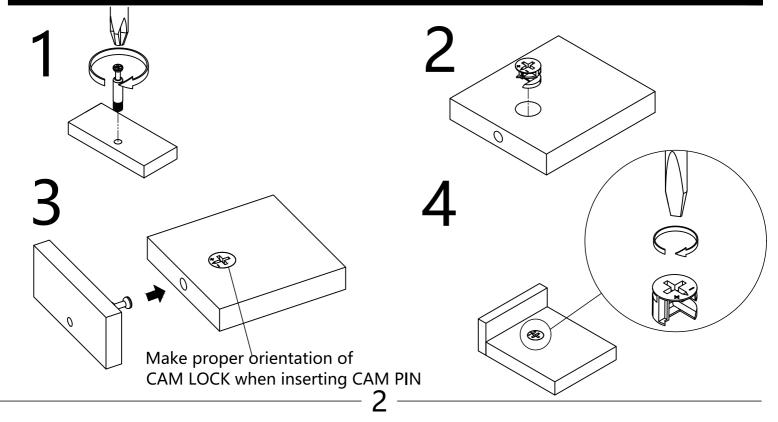


BOARD IDENTIFICATION

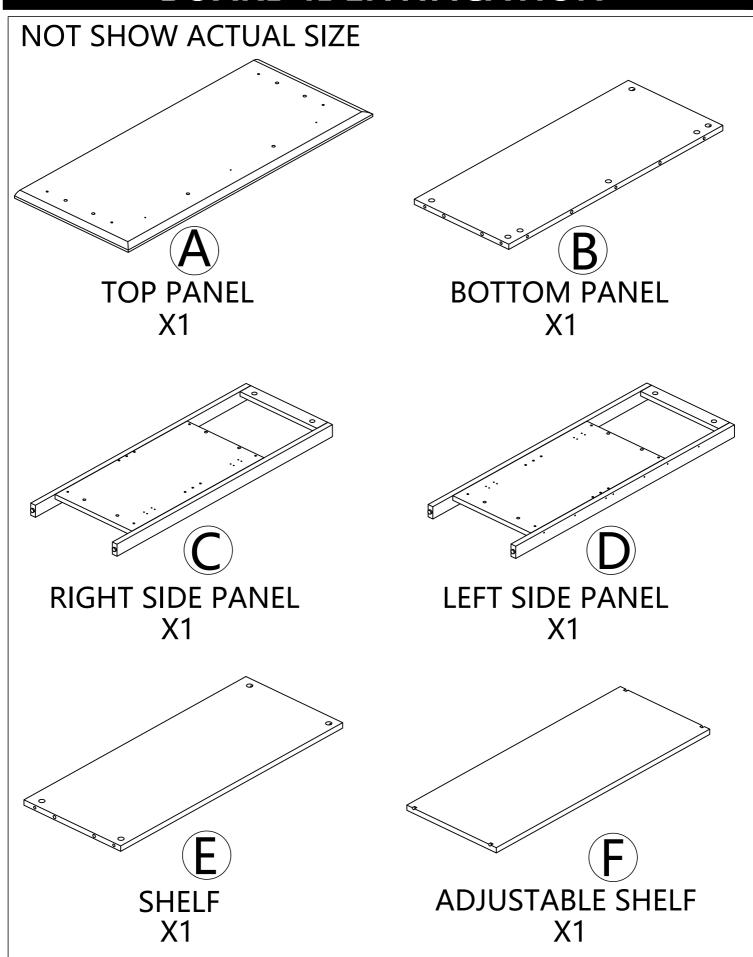


BOARD IDENTIFICATION


NOT SHOW ACTUAL SIZE

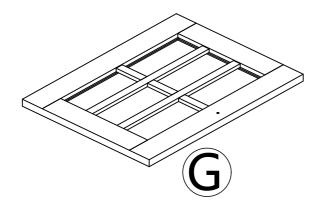


DOOR PANEL X2

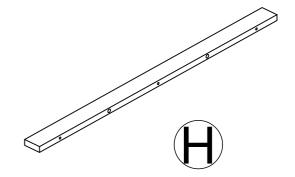


FRONT TOP PANEL X1

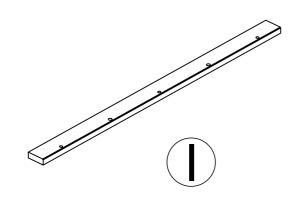


FRONT BOTTOM PANEL X1

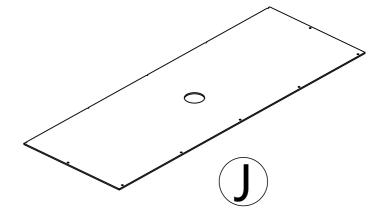

TOP BACK PANEL X1

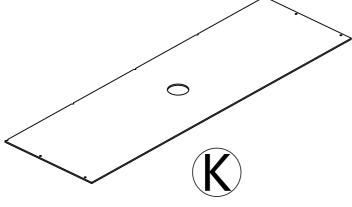


MIDDLE BACK PANEL X1

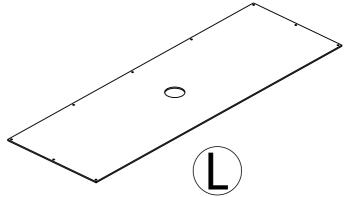



BOTTOM BACK PANEL X1


HARDWARE PART LIST


NOT SHOW ACTUAL SIZE

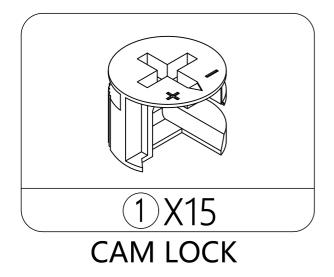


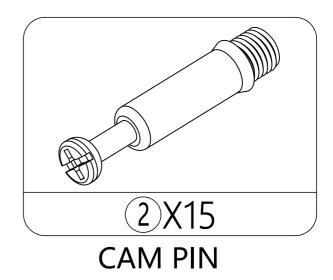

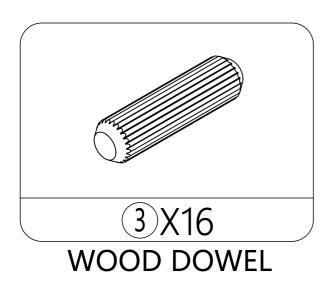

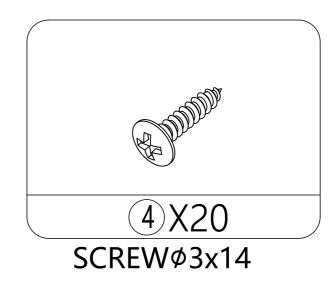


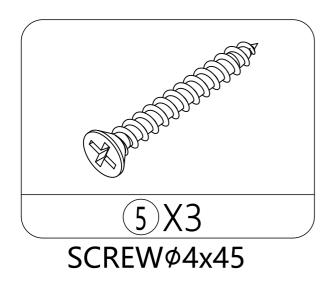


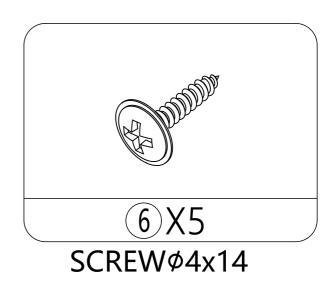


HARDWARE PART LIST


NOT SHOW ACTUAL SIZE

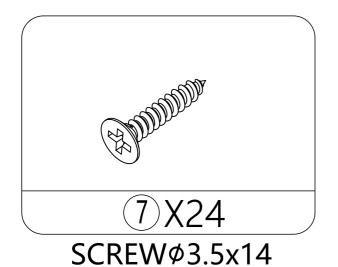


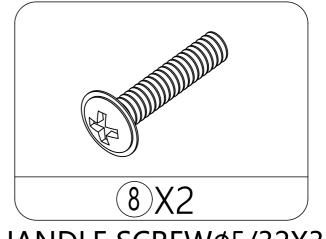

HANDLE SCREW Ø 5/32 X 32

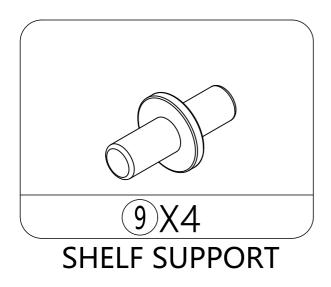


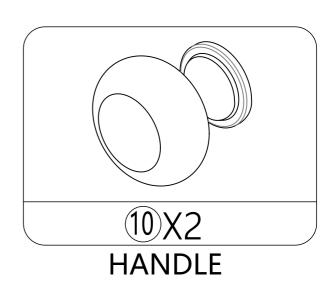


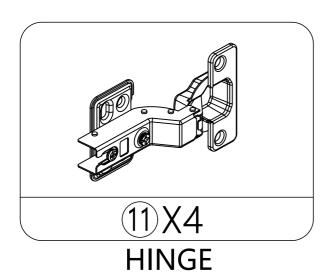






BOARD IDENTIFICATION

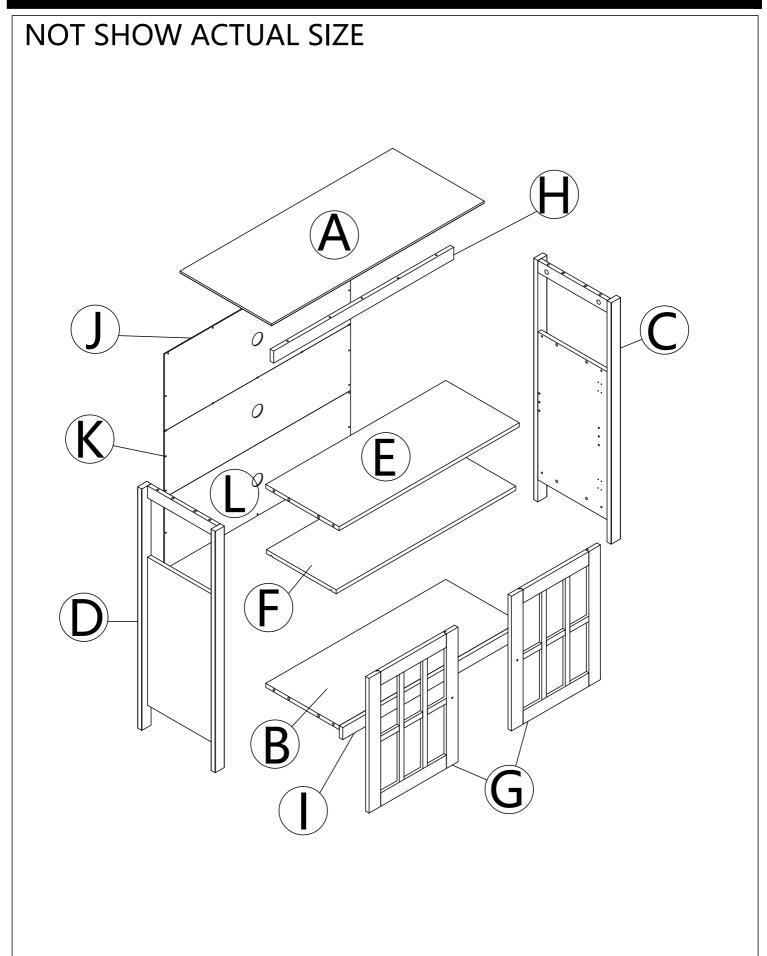


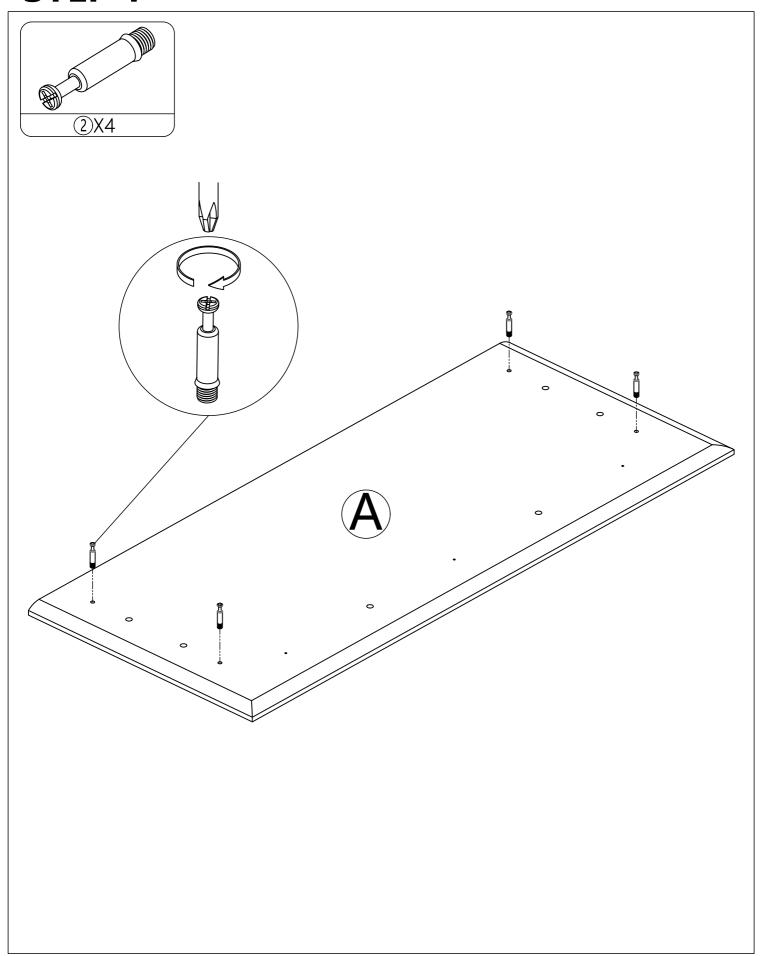


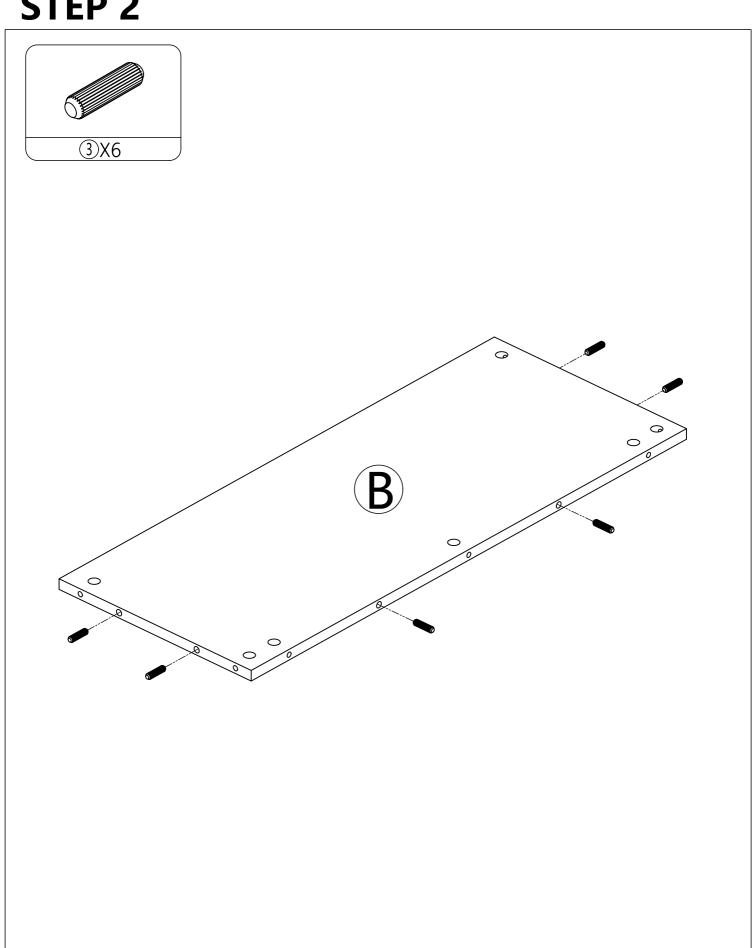


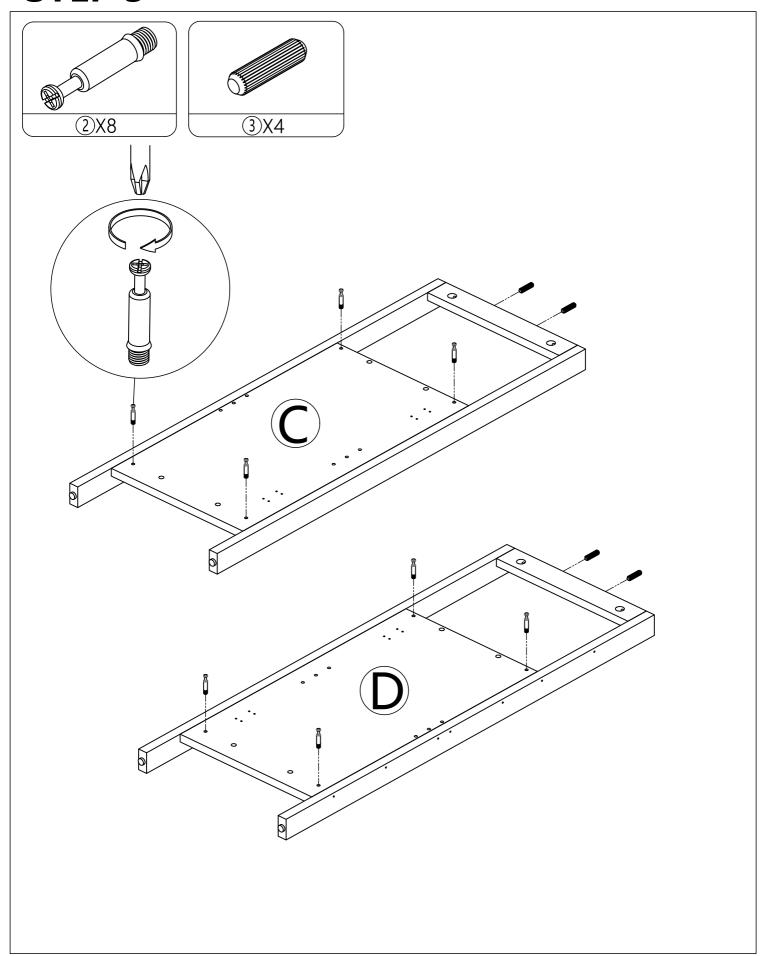


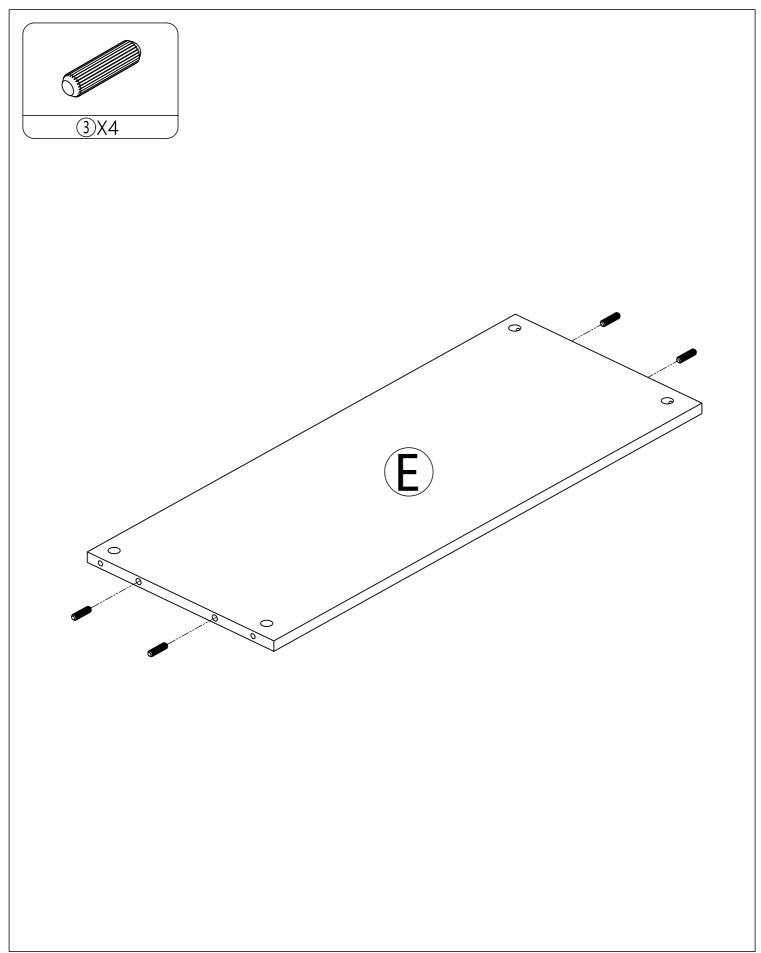


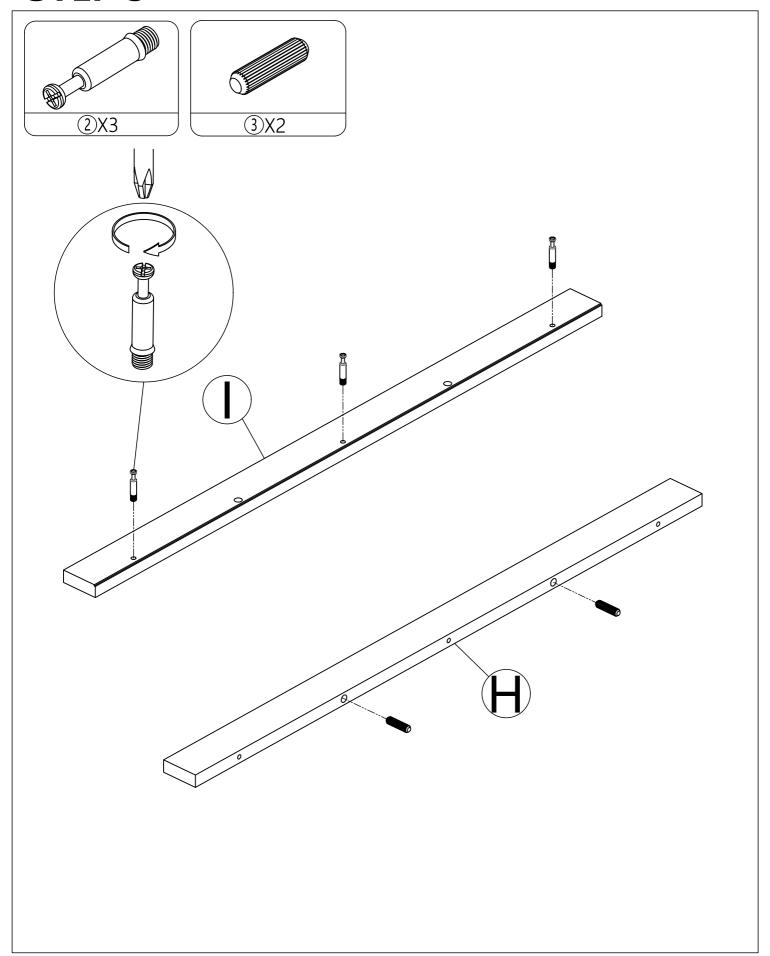


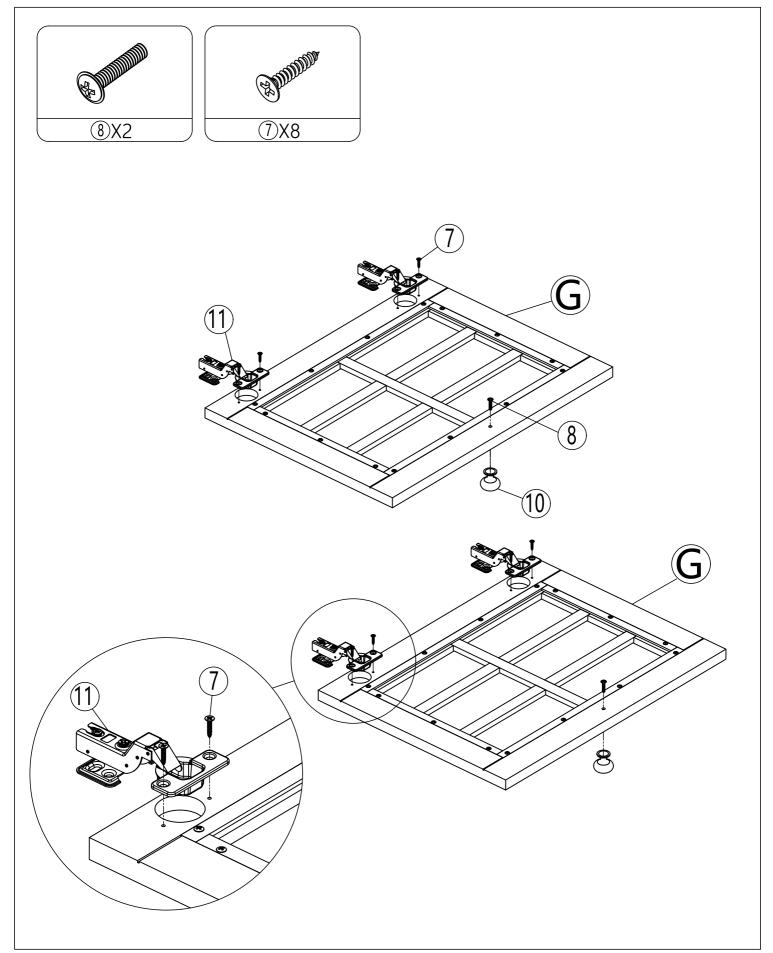

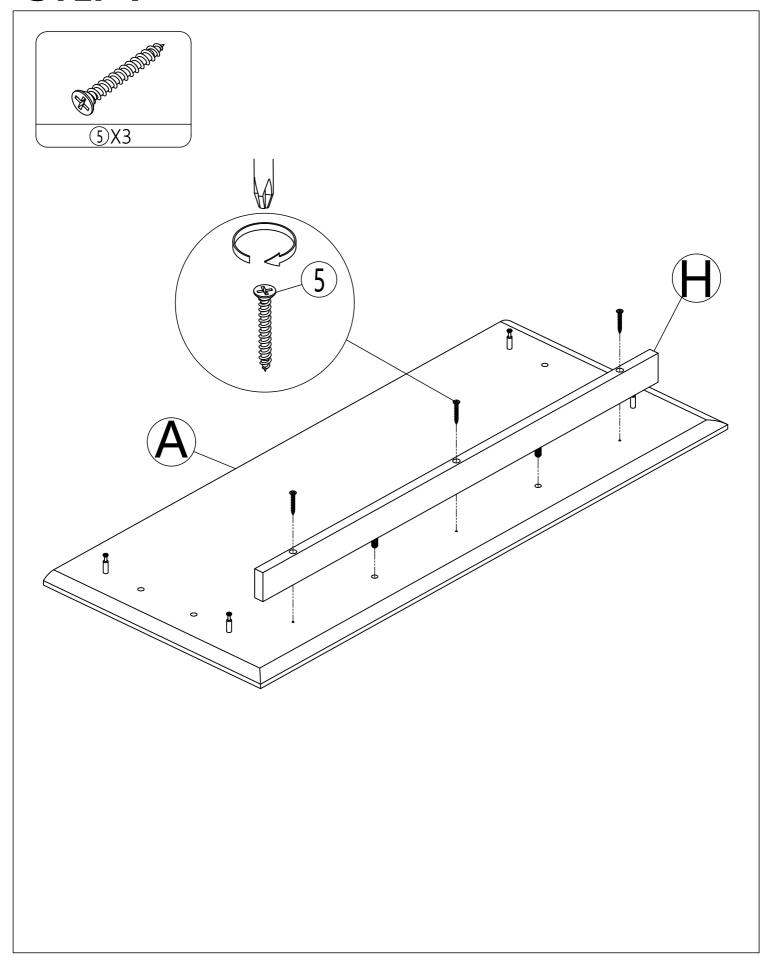


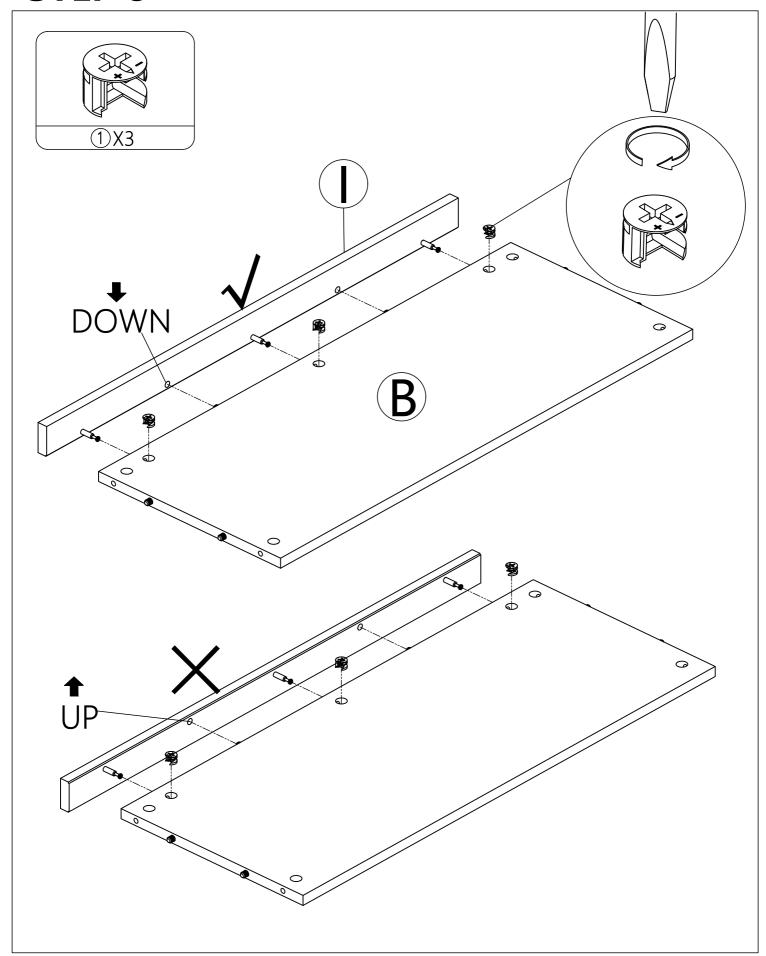


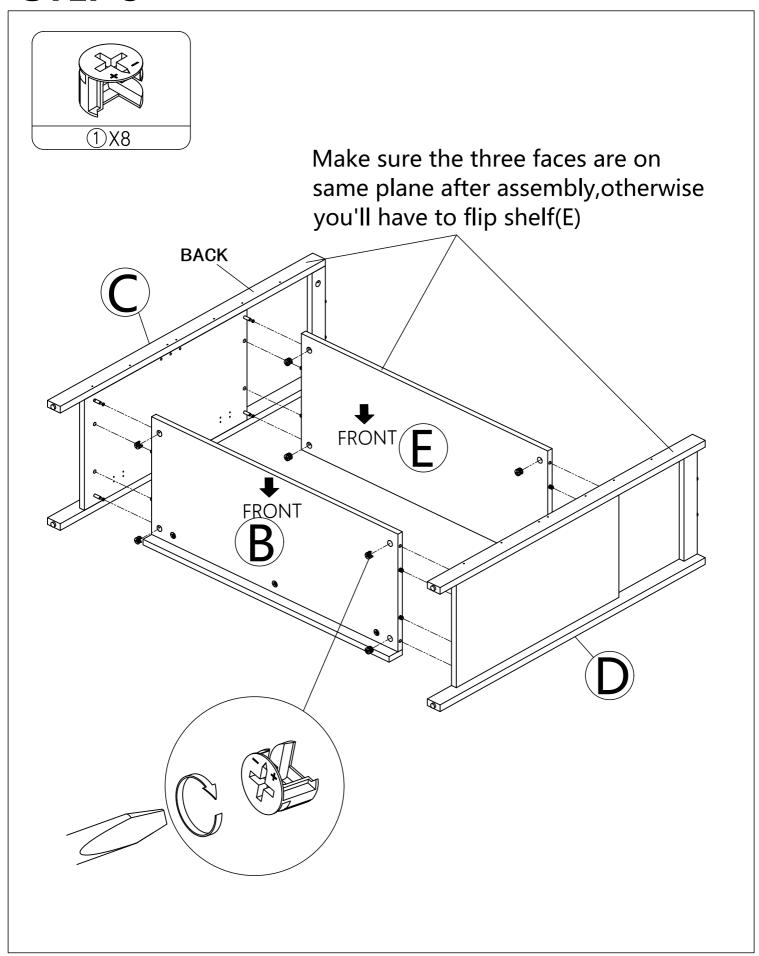

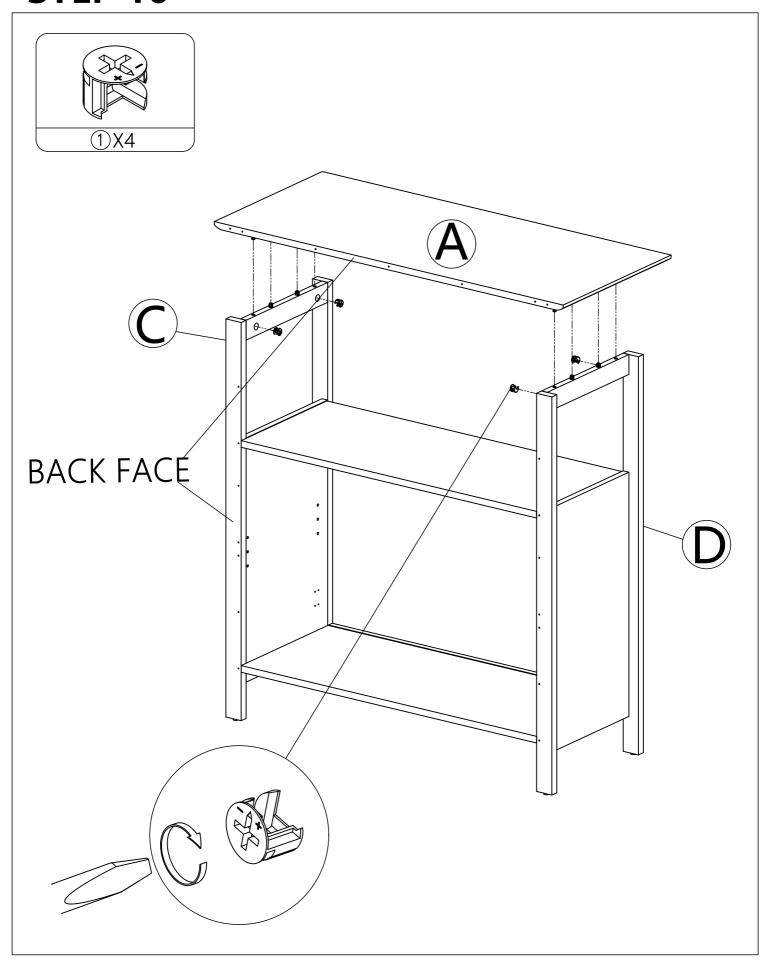



17

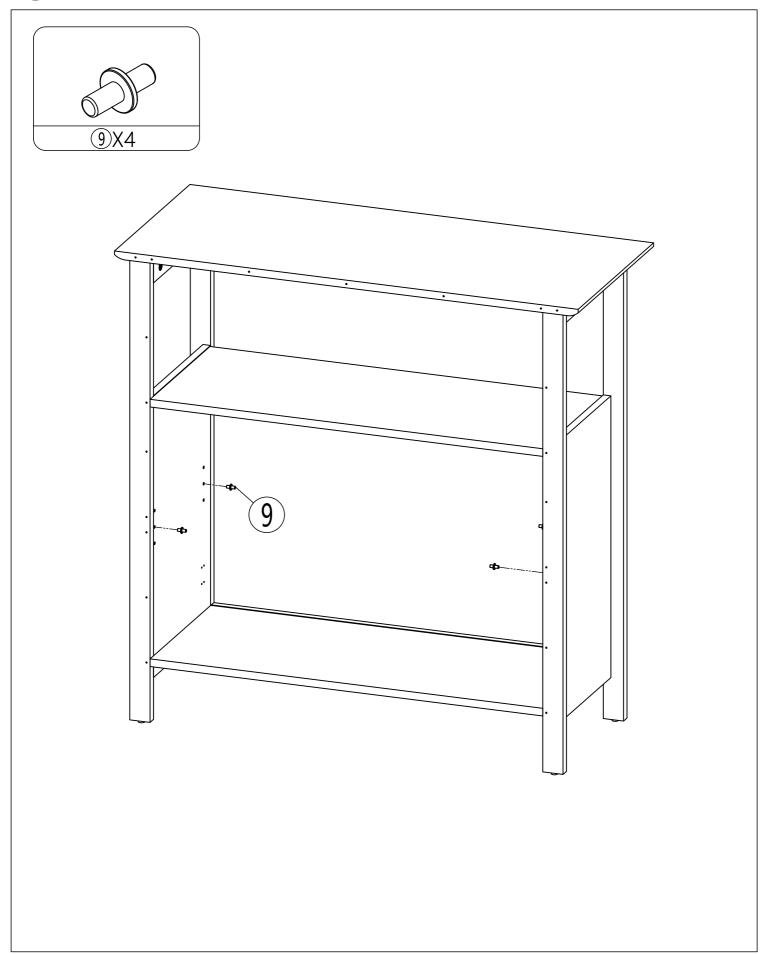


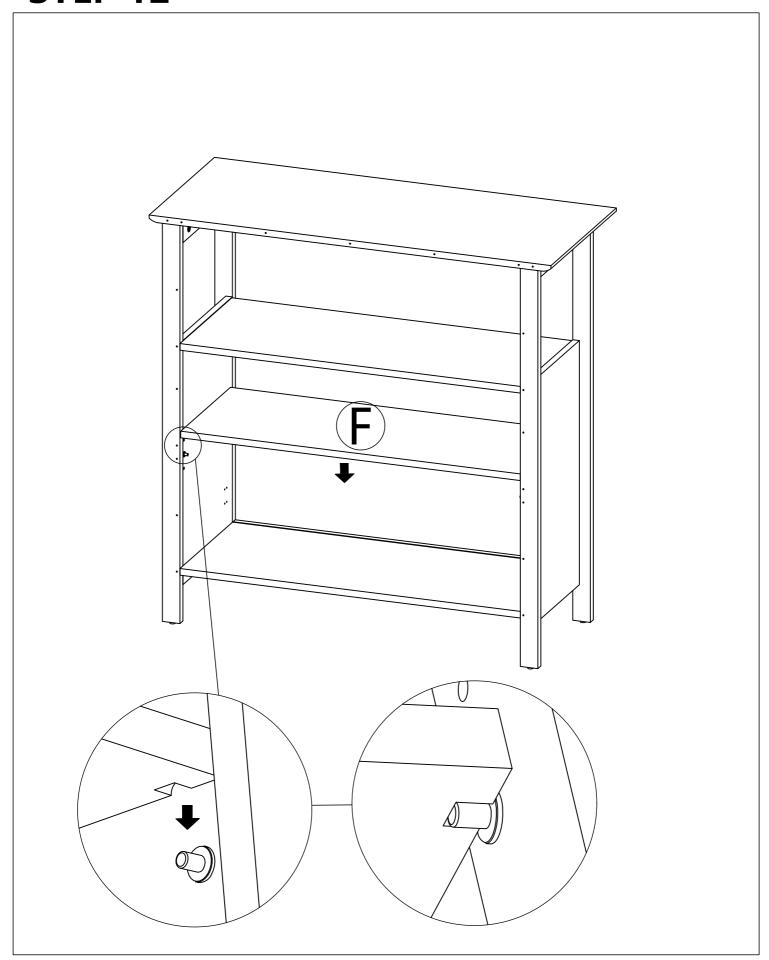


19

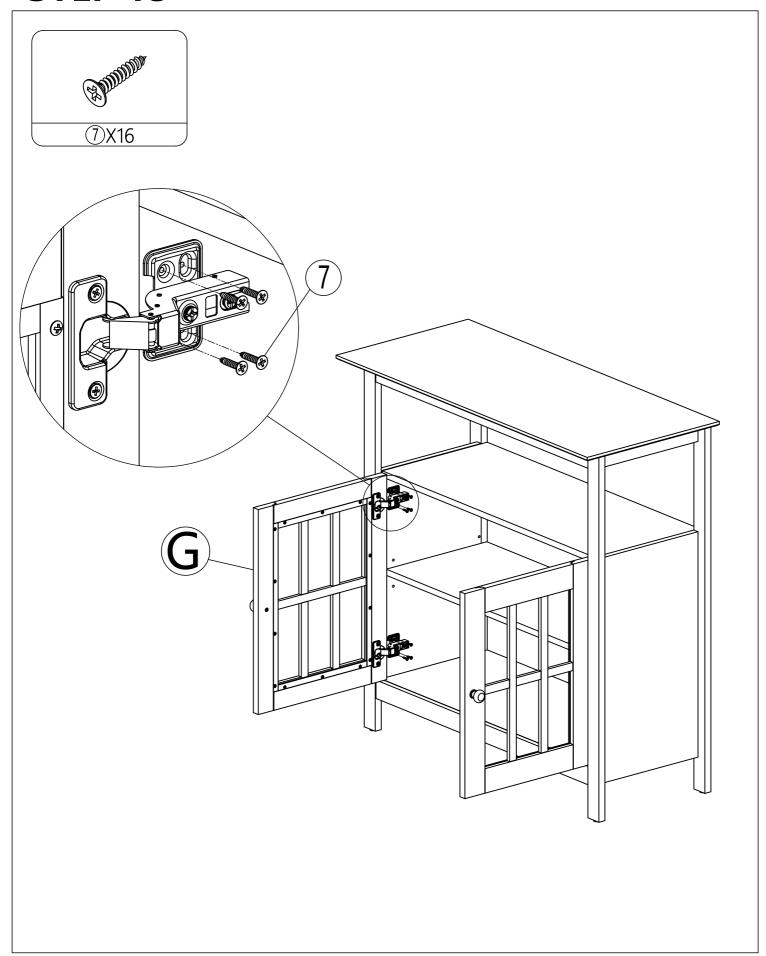

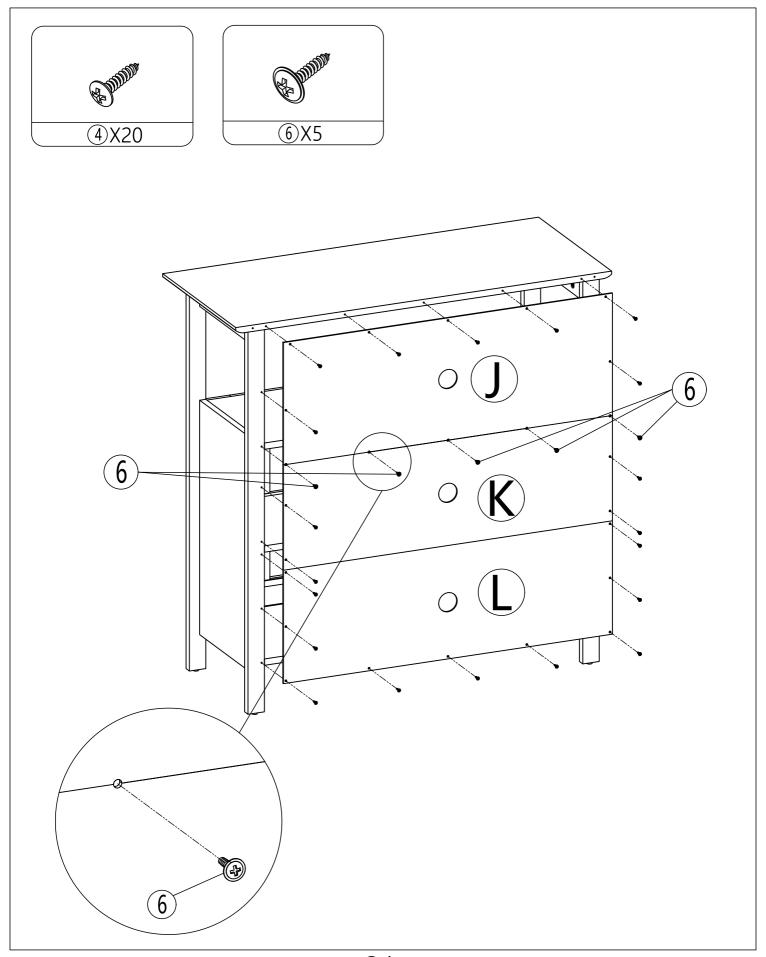

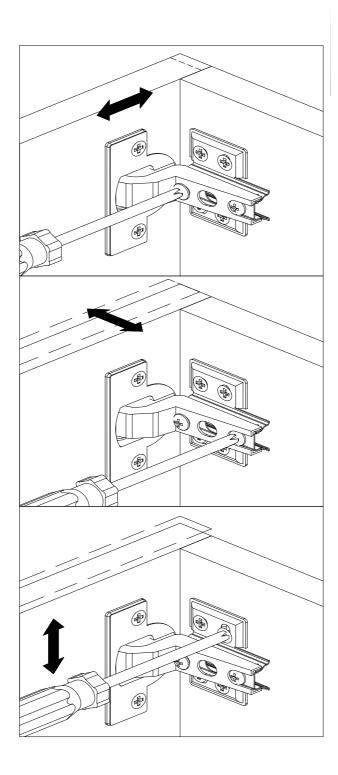

Use a Phillips screwdriver to re-align or adjust the hinges that attach the doors to the cabinet.

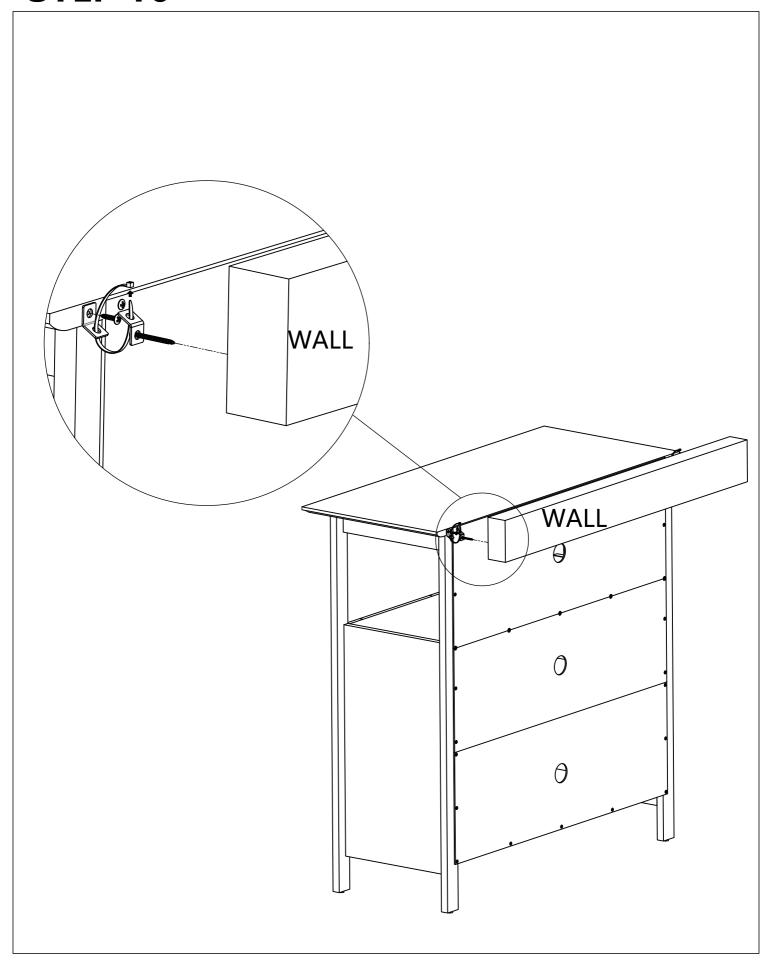

23

Maximum Load

This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, collapse, and serious injury.

